

BioPass3000

SDK Installation Guide

Version 1.0

Feitian Technologies Co., Ltd. ("Feitian" for short) will do their best to keep the content of this document as accurate as possible. But Feitian will not take the responsibilities for any direct or indirect loss that may be caused by this document. The content of this document will be amended along with the updating of the product without notification.

Revision History:

Date	Version	Description
December 2006	1.0	1st Edition

Feitian Technologies Co., Ltd.

Software Developer's Agreement

All Products of Feitian Technologies Co., Ltd. (Feitian) including, but not limited to, evaluation copies, diskettes, CD-ROMs, hardware and documentation, and all future orders, are subject to the terms of this Agreement. If you do not agree with the terms herein, please return the evaluation package to us, postage and insurance prepaid, within seven days of their receipt, and we will reimburse you the cost of the Product, less freight and reasonable handling charges.

1. Allowable Use - You may merge and link the Software with other programs for the sole purpose of protecting those programs in accordance with the usage described in the Developer's Guide. You may make archival copies of the Software.

2. Prohibited Use - The Software or hardware or any other part of the Product may not be copied, reengineered, disassembled, decompiled, revised, enhanced or otherwise modified, except as specifically allowed in item 1. You may not reverse engineer the Software or any part of the product or attempt to discover the Software's source code. You may not use the magnetic or optical media included with the Product for the purposes of transferring or storing data that was not either an original part of the Product, or a Feitian provided enhancement or upgrade to the Product.

3. Warranty - Feitian warrants that the hardware and Software storage media are substantially free from significant defects of workmanship or materials for a time period of twelve (12) months from the date of delivery of the Product to you.

4. Breach of Warranty - In the event of breach of this warranty, Feitian's sole obligation is to replace or repair, at the discretion of Feitian, any Product free of charge. Any replaced Product becomes the property of Feitian.

Warranty claims must be made in writing to Feitian during the warranty period and within fourteen (14) days after the observation of the defect. All warranty claims must be accompanied by evidence of the defect that is deemed satisfactory by Feitian. Any Products that you return to Feitian, or a Feitian authorized distributor, must be sent with freight and insurance prepaid.

EXCEPT AS STATED ABOVE, THERE IS NO OTHER WARRANTY OR REPRESENTATION OF THE PRODUCT, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

5. Limitation of Feitian's Liability - Feitian's entire liability to you or any other party for any cause whatsoever, whether in contract or in tort, including negligence, shall not exceed the price you paid for the unit of the Product that caused the damages or are the subject of, or indirectly related to the cause of action. In no event shall Feitian be liable for any damages caused by your failure to meet your obligations, nor for any loss of data, profit or savings, or any other consequential and incidental damages, even if Feitian has been advised of the possibility of damages, or for any claim by you based on any third-party claim.

6. Termination - This Agreement shall terminate if you fail to comply with the terms herein. Items 2, 3, 4 and 5 shall survive any termination of this Agreement.

CE Attestation of Conformity

The equipment complies with the principal protection requirement of the EMC Directive (Directive 89/336/EEC relating to electromagnetic compatibility) based on a voluntary test.

This attestation applies only to the particular sample of the product and its technical documentation provided for testing and certification. The detailed test results and all standards used as well as the operation mode are listed in

Test report No.: 70407310011

Test standards: EN 55022/1998 EN 55024/1998

After preparation of the necessary technical documentation as well as the conformity declaration the CE marking as shown below can be affixed on the equipment as stipulated in Article 10.1 of the Directive. Other relevant Directives have to be observed.

FCC certificate of approval

This Device is in conformance with Part 15 of the FCC Rules and Regulations for Information Technology Equipment.

USB

This equipment is USB based.

WEEE

Dispose in separate collection.



Contents

- 1. BioPASS3000 SUPPORTED PLATFORMS..... 7
- 2. INSTALLING BioPASS3000 SDK..... 7
- 3. UNINSTALLING BioPASS3000 SDK 12

Install/Uninstall BioPass3000 SDK (Software Development Kit)

The software of BioPass3000 must be installed before the token can be used on the computer. This chapter provides a detailed description on how to install the software of BioPass3000 in Windows environment.

The following topics will be discussed:

- BioPass3000 Supported Platforms
- Installing BioPass3000 SDK
- Uninstalling BioPass3000 SDK

1. BioPass3000 Supported Platforms

BioPass3000 currently supports the following platforms:

- Windows 98 SE
- Windows Me
- Windows 2000
- Windows XP
- Windows 2003

Note: User could find the initial password from the product's package or from the product vendor.

2. Installing BioPass3000 SDK

BioPass3000 SDK installs the following components on your computer:

- BioPass3000 SDK documents
- BioPass3000 header files and library files
- BioPass3000 runtime environment distribution package
- BioPass3000 samples

NOTE: Please make sure all of the previous versions of BioPass3000 SDKs have been uninstalled before starting a new installation.

Insert the Installation Disc into CD-ROM drive and execute Setup.exe. The installation process starts and proceeds to Welcome window, as shown in FIG. 1.

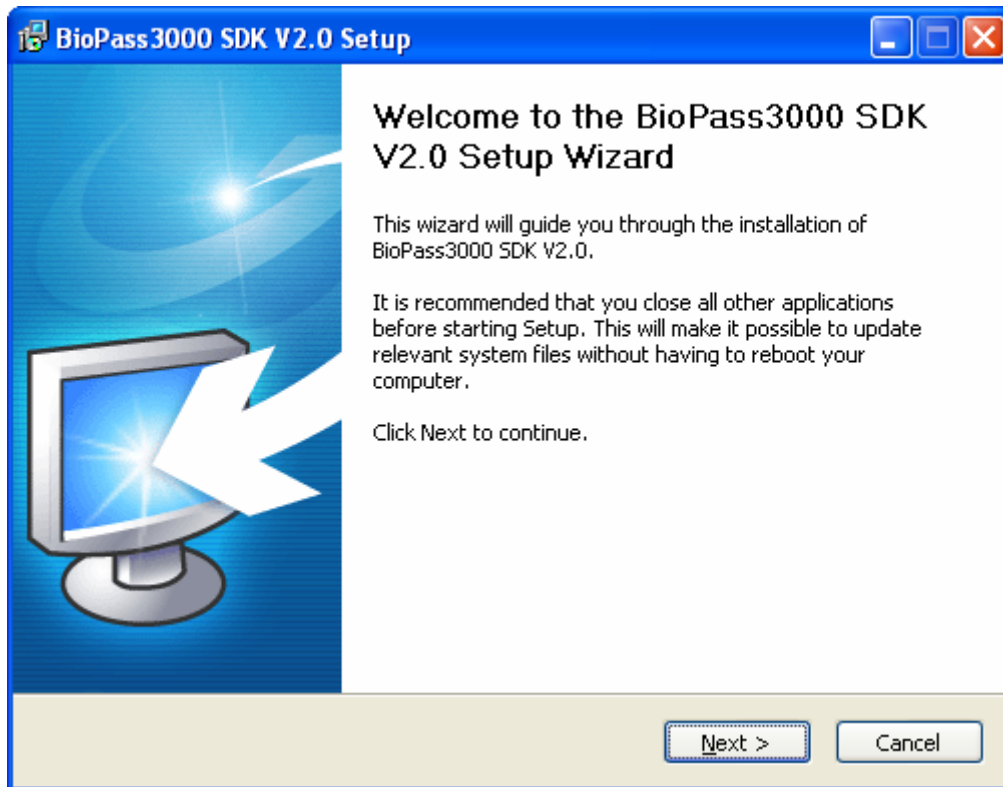


FIG. 1

Click "Next" button to continue and License Agreement window appears, as shown in FIG. 2.

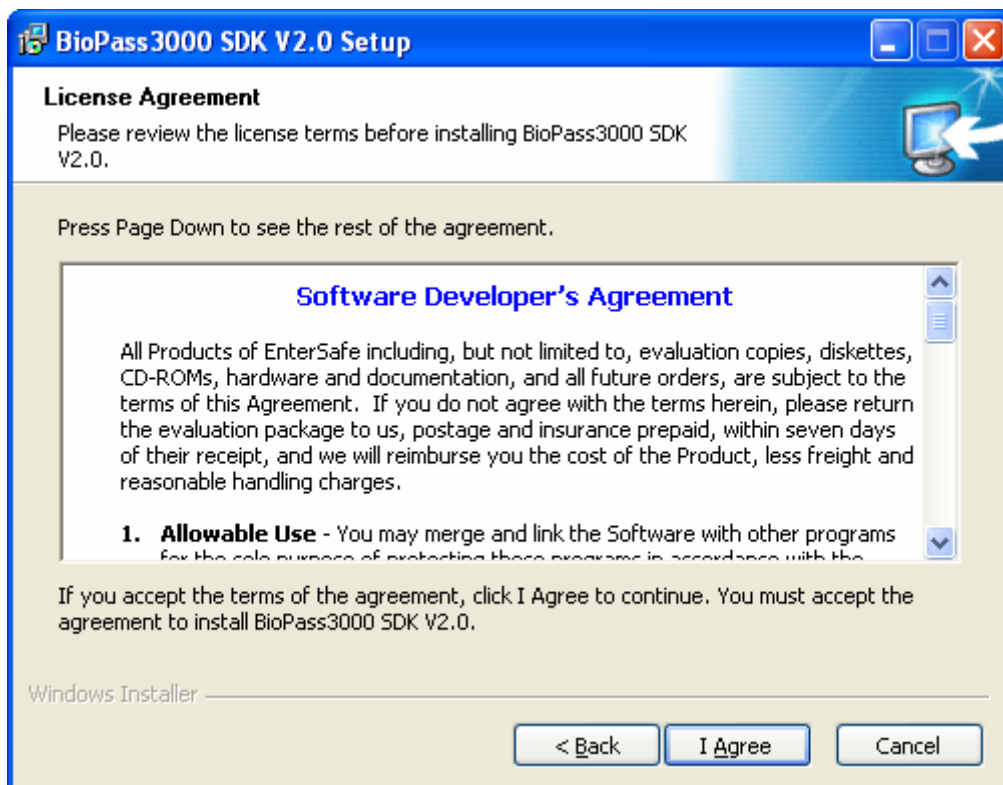


FIG. 2

Please read the Software Developer's Agreement carefully. If you agree with these terms, choose "I Agree" button to accept the agreement and go to the next step, as shown in FIG. 3.

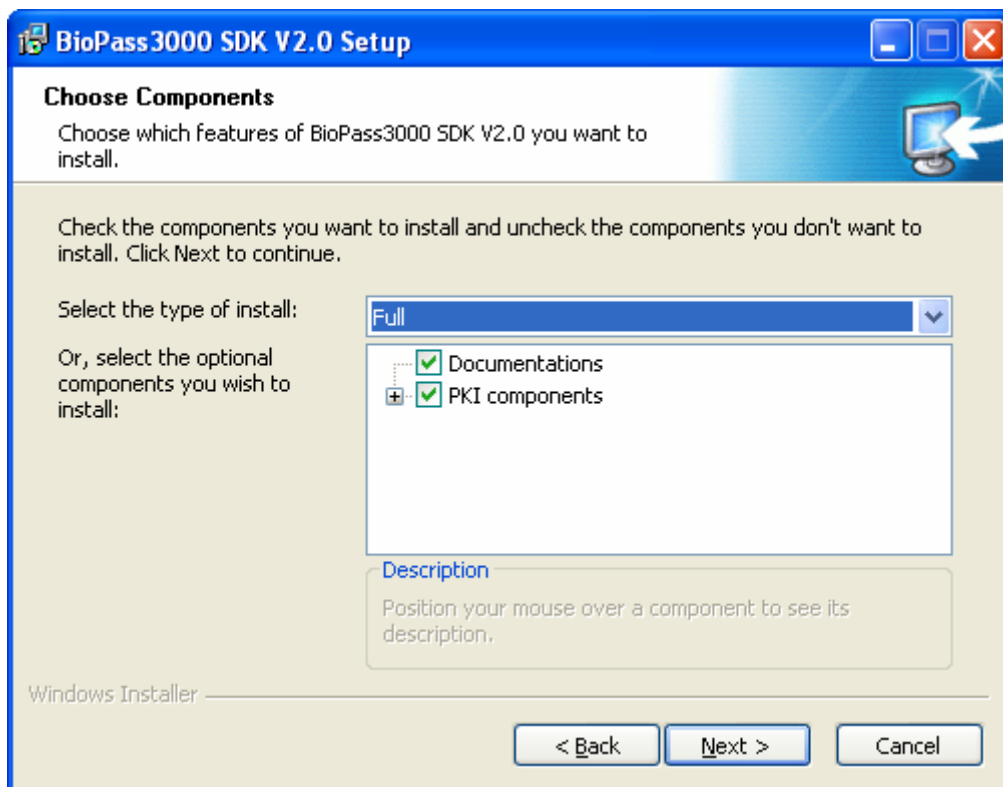


FIG. 3

The Setup program lists the components for installation. You can make your selection or choose to all the components. After you have selected the components, click "Next" button to go to the next step, as shown in FIG. 4.

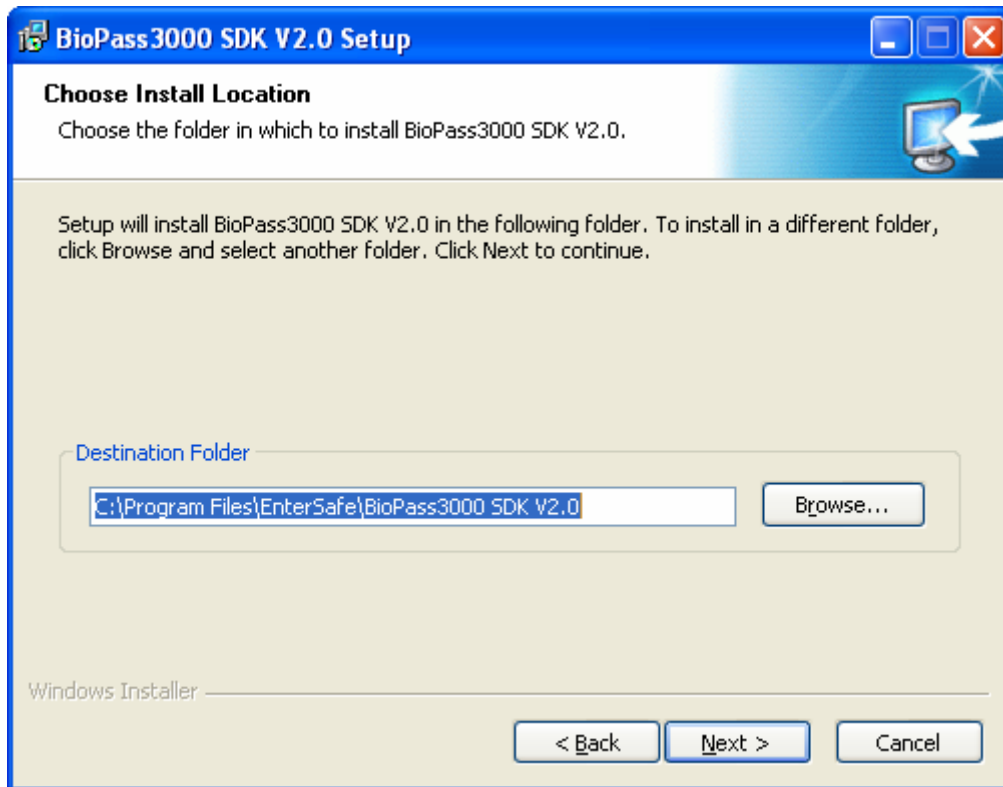


FIG. 4

Choose the folder where you want to install the software. You can use the default path, or you can click "Browse" button to choose a different location. Then click "Next" button to go to Select Program Folder window. The setup program will put the program shortcuts into the start menu folder you specified, as shown in FIG. 5.

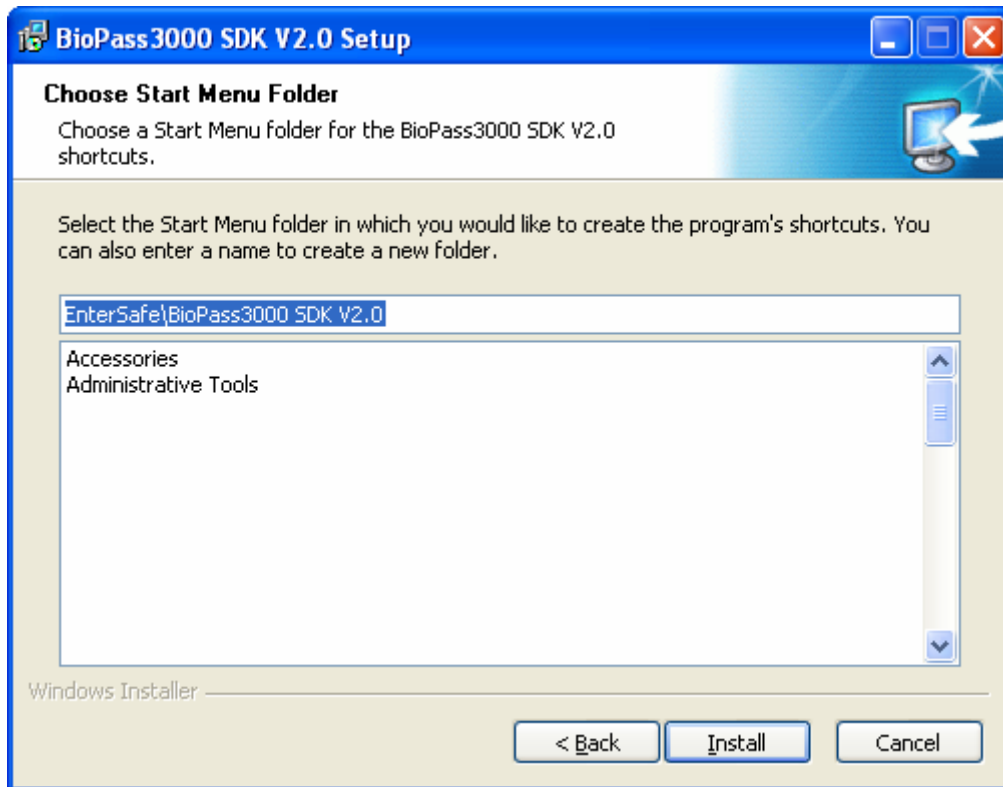


FIG. 5

Click “Install” button. The Setup program installs BioPass3000 SDK into your system automatically, as shown in FIG. 6.

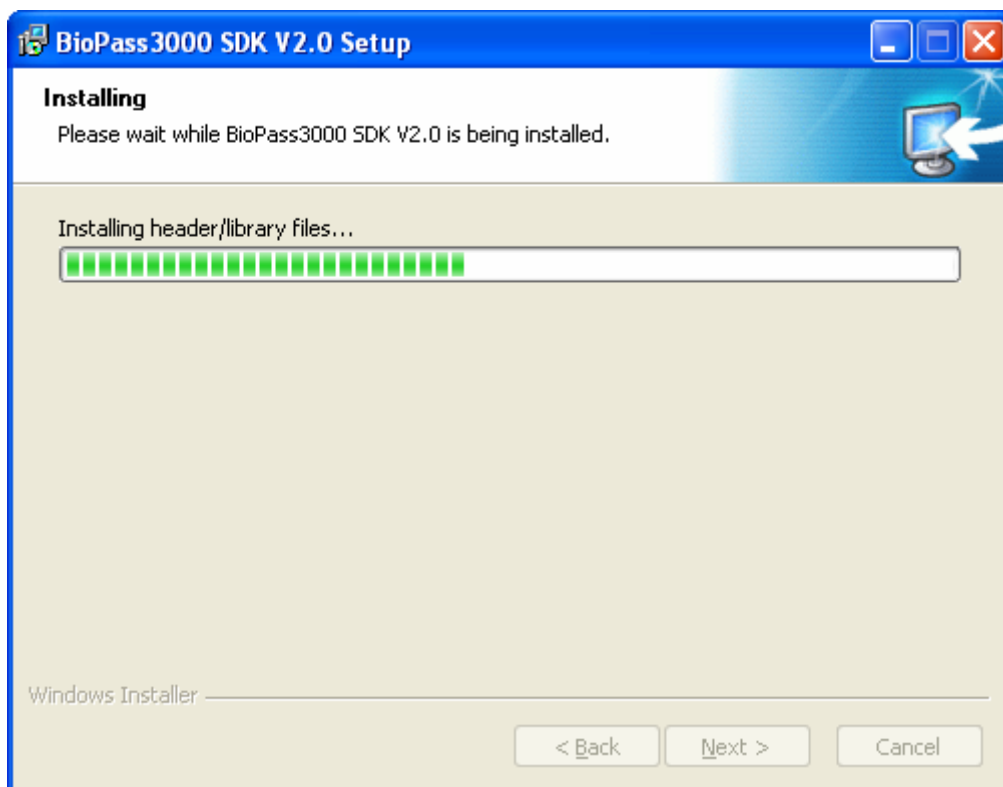


FIG. 6

After the Setup program has installed the software on your computer successfully, the following window appears:

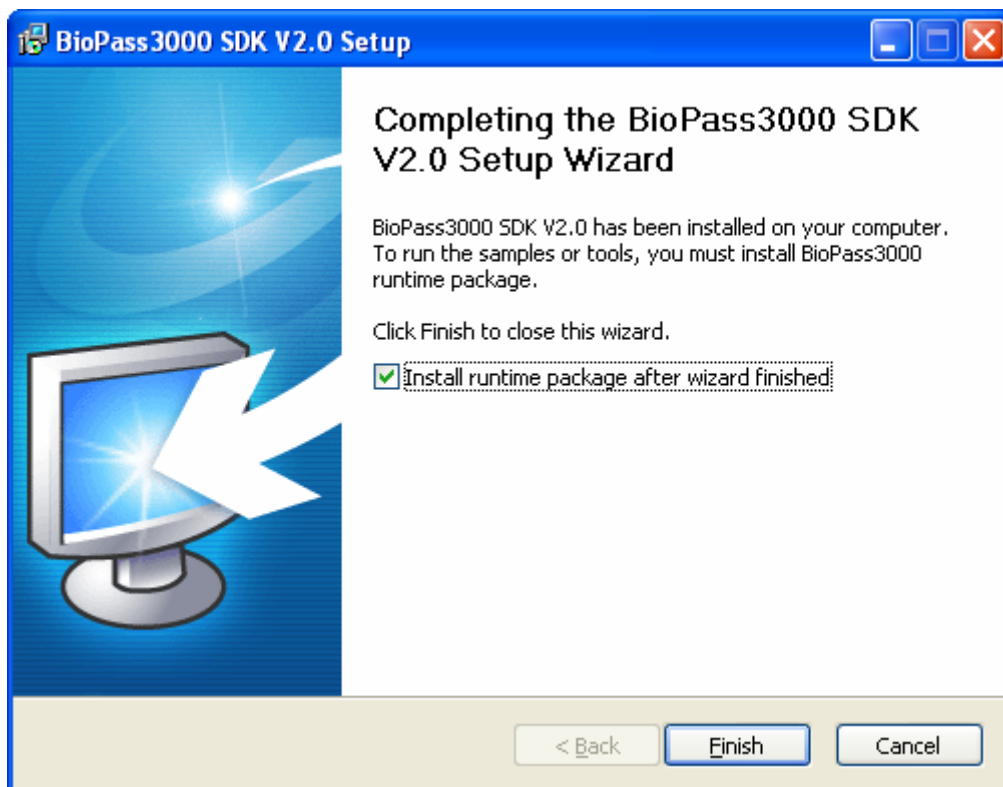


FIG. 7

Click "Finish" button to finish the installation. If you choose "Install runtime package after wizard finished", you will automatically enter the installation program of BioPass3000 runtime package after BioPass3000 SDK installation finished.

3. Uninstalling BioPass3000 SDK

Uninstalling BioPass3000 SDK or runtime package is similar to uninstalling other applications. You can use either of the following two methods:

- Use "Add or Remove Programs" in Control Panel

Open the control panel by "Start" → "Settings" → "Control Panel" and double click "Add or Remove Programs". In the "Change or Remove Programs" page, select the "BioPass3000 SDK V2.0 (Remove only)" in the "Currently installed programs" list, as shown in FIG. 8.

- Uninstall from Start Menu

Select "Start" → "Programs" → "EnterSafe" → "BioPass3000 SDK V2.0" → "Uninstall

BioPass3000 SDK V2.0"

Both methods can start the uninstalling wizard, shown in FIG. 9:

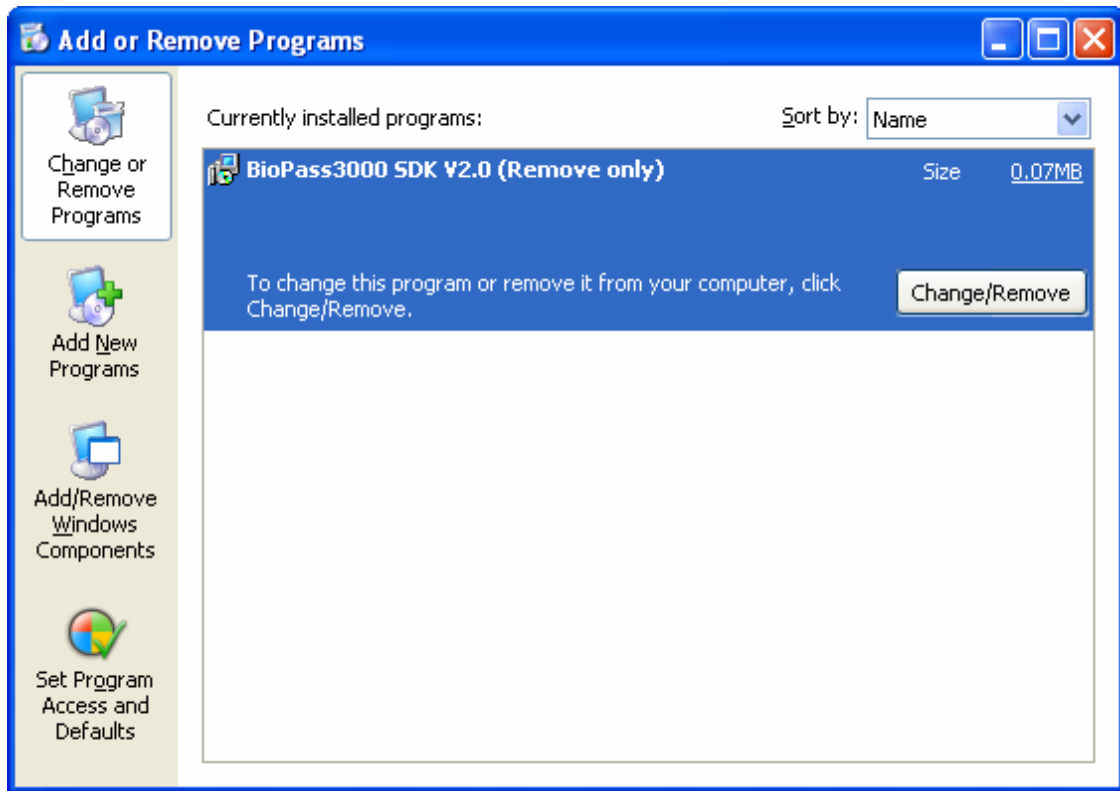


FIG. 8

Click “Change/Remove” button and you will go to the Welcome window for uninstalling BioPass3000 SDK, as shown in FIG. 9.

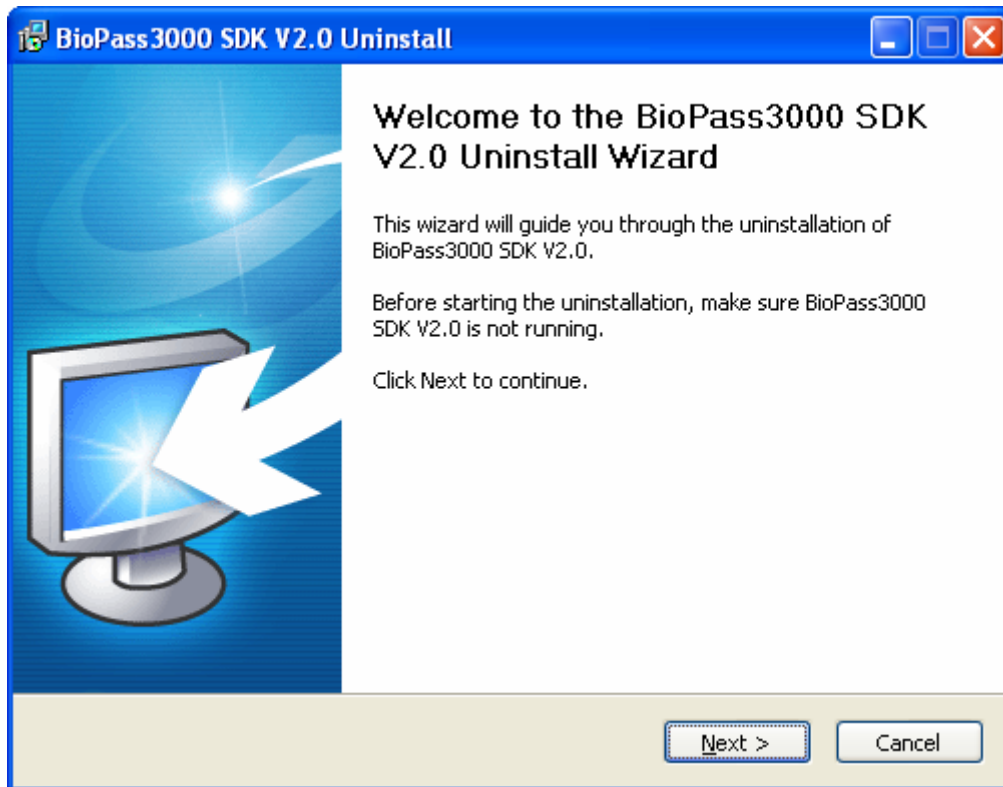


FIG. 9

Click "Next" button, and the path of installed SDK appears, as shown in FIG. 10.

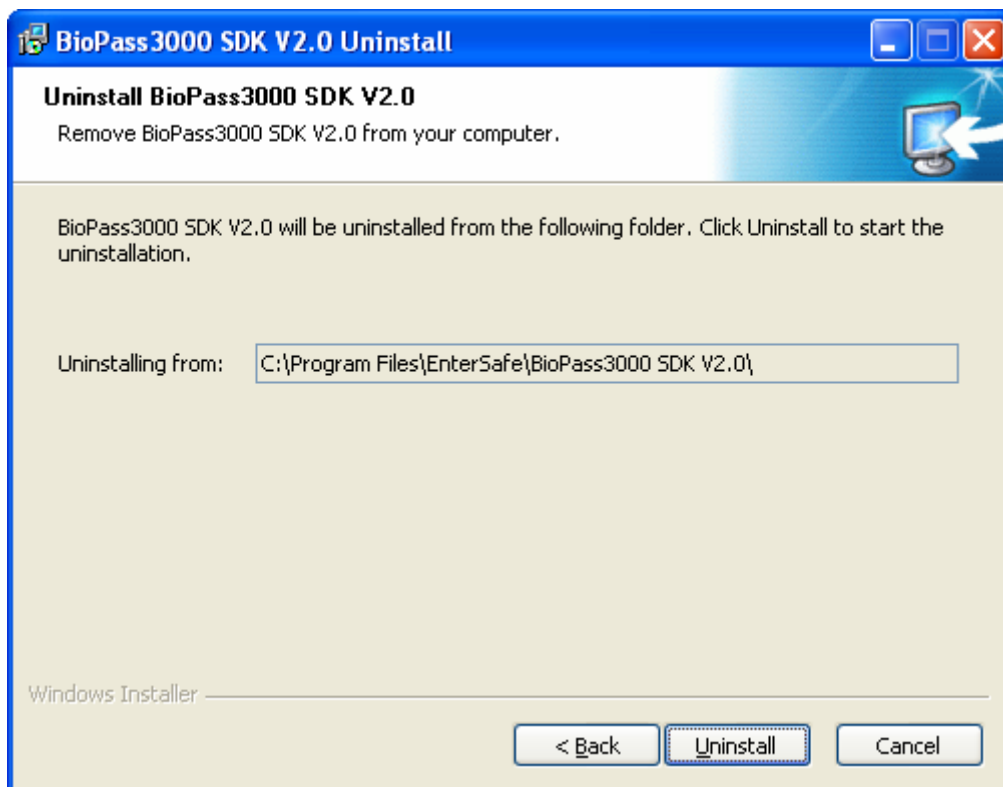


FIG. 10

Click “Uninstall” button to start the uninstallation process, as shown in FIG. 11.

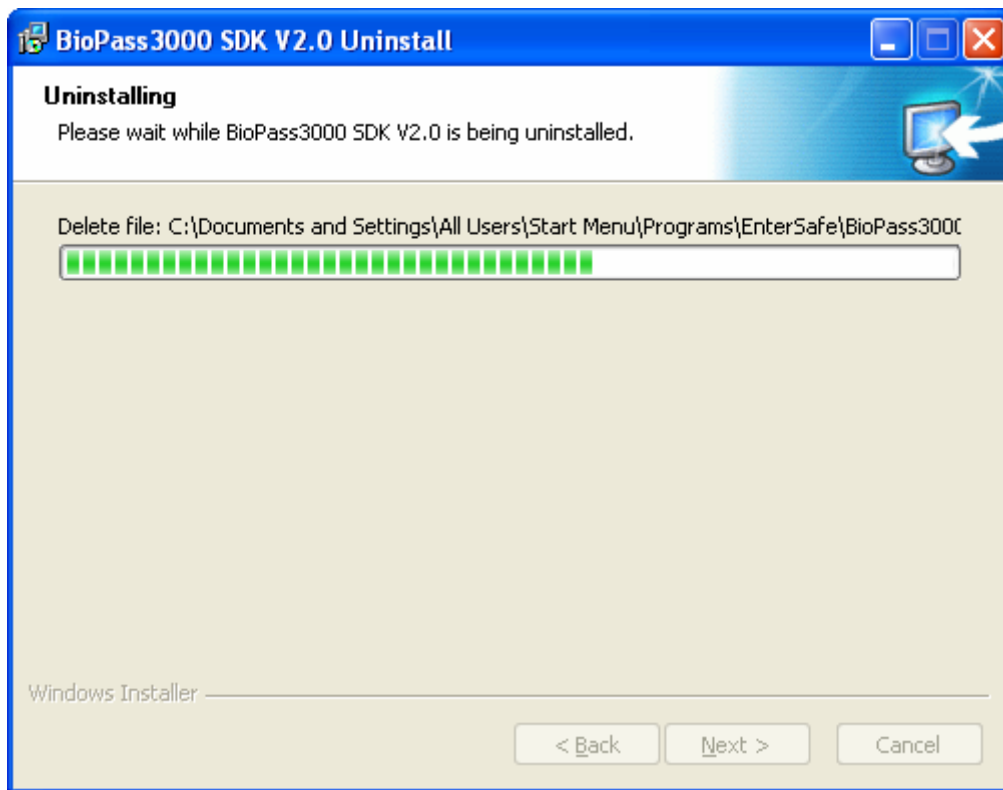


FIG. 11

After the uninstallation finishes, the following window appears. Click “Finish” button to finish the uninstallation.

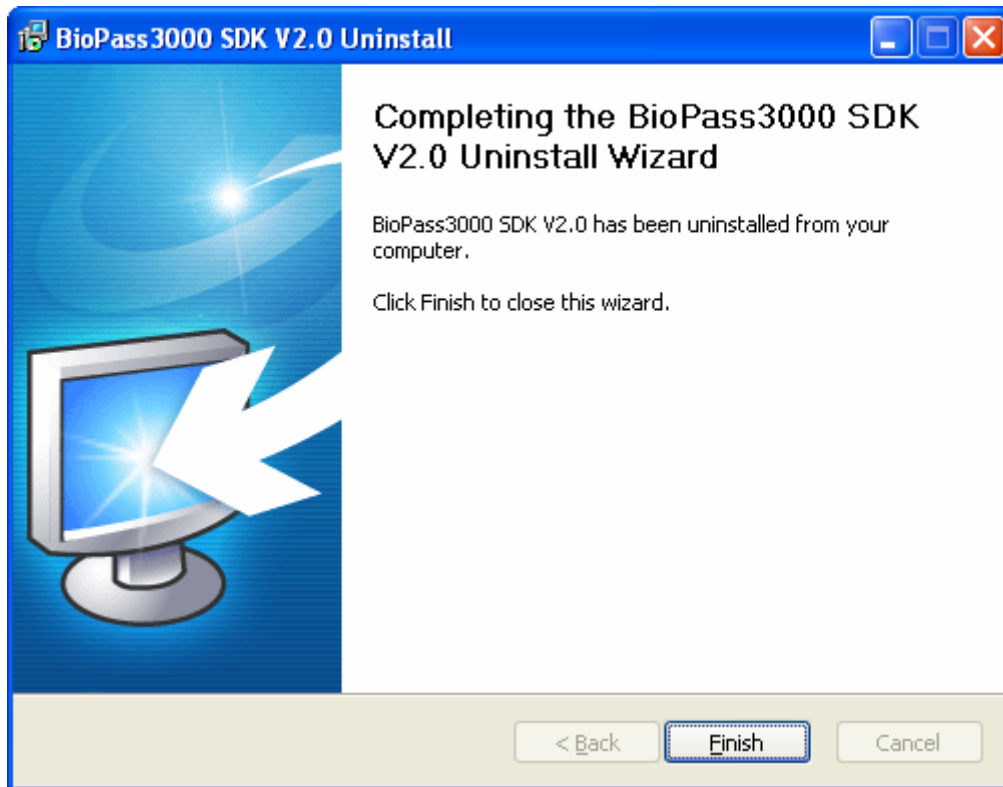


FIG. 12